


LED Dimmer Installation Guide

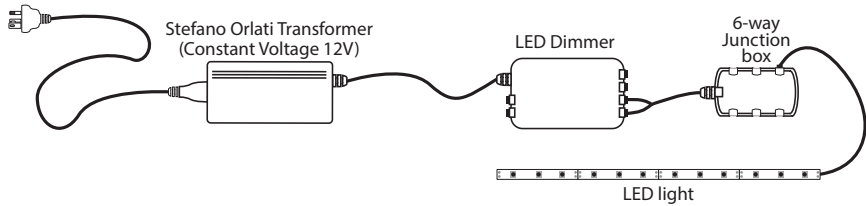

DIMMER BOX CONTENTS*

- Dimmer Control Unit connected to 6-Way Junction Box
- Dimmer Remote (includes AAA Batteries)
- Mounting Bracket for Remote control
- * LED Dimmer Unit & Remote are supplied Pre-Paired

Capacity Guide	
Working Voltage	DC 12V/24V
Receiving Range	20 meters
RF Touch Remote	2.4GHz

DIMMER REMOTE – USE/FUNCTION OF KEYS

KEY 1. On


KEY 2. Off

KEY 3. Highest Brightness

KEY 4. Medium Brightness

KEY 5. Lowest Brightness

COLOUR RING. Used to change the brightness from highest to lowest

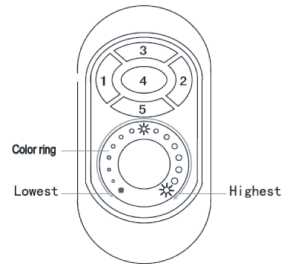

PAIRING METHOD FOR ADDITIONAL REMOTES

STEP 1. Ensure Transformer is plugged in & Power is ON

STEP 2. Connect the DC power cord to the Dimmer Control Box then, press Key 3 once within 3 seconds

- The light will blink 3 times if matching is successful
- Repeat above steps for more than one remote pairing

CLEARING METHOD

STEP 1. Ensure Transformer is plugged in & Power is ON

STEP 2. Connect the DC power cord to the Dimmer Control Box then, press Key 3 five times within 3 seconds

- The light will blink 6 times if clearing is successful

NOTE:

Replacing Remote Batteries

Please ensure the colour ring is not being touched when loading batteries. It is recommended to use the remote controller within 3 seconds after batteries have been loaded