


Hand Motion Sensor Installation Guide

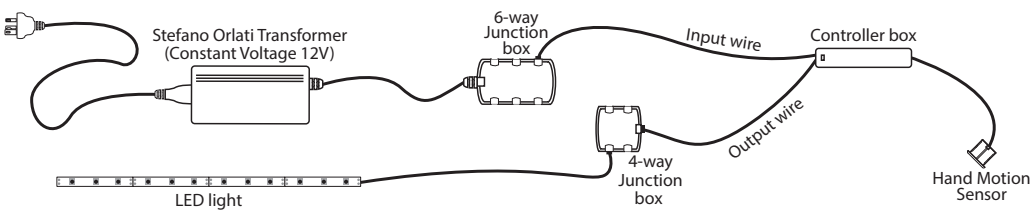

MOTION SENSOR BOX CONTENTS

- Motion Sensor Switch with Controller Box
- 4-way Junction Box
- 2m Cable leading from Sensor switch to controller box
- 2m Input/Output Cable leading from Controller to Junction boxes

Capacity Guide	
Input (Volts)	DC 12V
Output (Volts)	DC 12V
Loading Power (Watts)	24W

INSTRUCTION GUIDE

STEP 1.

- The Controller Box marked “Movement Sensor Switch” has two wires labelled - Input & Output
- Output wire is connected to the 4-way Junction box
- Input wire is to be connected to any of the outlets in the 6-way Junction Box leading to the Transformer

STEP 2.

- The LED Strip Light or Downlight cable is to be connected to any of the outlets on the 4-way Junction Box

STEP 3.

- Plug into power source to activate LED Light & Sensor Switch

NOTE:

For Hand Sensor Switch mounting see diagram below

